

CB Channel Frequencies

1	26.965	20	27.205
2	26.975	21	27.215
3	26.985	22	27.225
		24	27.235
4	27.005	25	27.245
5	27.015	23	27.255
6	27.025	26	27.265
7	27.035	27	27.275
		28	27.285
8	27.055	29	27.295
9	27.065	30	27.305
10	27.075	31	27.315
11	27.085	32	27.325
		33	27.335
12	27.105	34	27.345
13	27.115	35	27.355
14	27.125	36	27.365
15	27.135	37	27.375
		38	27.385
16	27.155	39	27.395
17	27.165	40	27.405
18	27.175		
19	27.185		

NOTE 1: The 20 KHz jump every 4 channels in the lower half of the band was to protect radio-control channels that existed before the Citizens Band was created.

NOTE 2: Channels 24 and 25 are out of sequence frequency-wise. They were "back-filled" into the 30KHz space between channels 22 and 23 when CB expanded from 23 to 40 channels in 1977